

ELECSTOR
RECHARGEABLE FAN
 PEDESTAL FAN - 16 INCH

Perfect for
 loadshedding!



INSTRUCTION MANUAL

Thank you for purchasing an Elecstor Rechargeable Fan, please read the instructions carefully before use.

The manual includes a warranty card. Please contact our support team if you experience any issues with the fan.

PRODUCT PARAMETER

Description

Beat the heat and elevate your comfort with the 16-Inch Pedestal Fan. Whether you're cooling down a living room, bedroom, or office, this fan's impressive features and performance will keep you comfortable and refreshed. Experience the perfect blend of functionality and elegance with our 16-Inch Pedestal Fan and stay cool all summer long!

Specifications

- Size: 16 inches
- Material: ABS+PP
- Voltage Compatibility: 110-240V
- Battery Type: Lead Acid
- USB Port: 5V
- DC Power Input: 16V


Features

- Rechargeable Battery: Operational during power outages
- Adjustable Fan Speeds: 9 adjustable settings
- User-Friendly Controls
- Operating Time: 7-9 hours depending on the setting
- Efficient Charging: 10-12 hours
- Night Light Functionality
- Convenient Remote Control

ATTENTION

1. Please ensure that the voltage indicated on the appliance corresponds with the mains voltage.
2. When the LED dims, please recharge the product.
3. Charge at least once in every 3 months for 10 hours, when the appliance is not in use.
4. Please keep the fan switched OFF status when not in use.
5. Suitable operating ambient humidity level is 0°C-40°C.
6. Please keep this product away from water.

PRODUCT DESCRIPTION

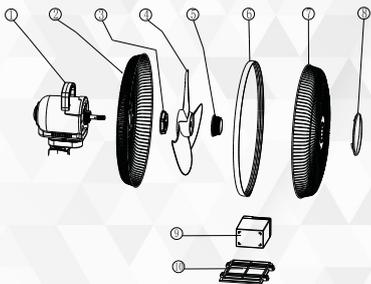


1. Control unit
2. Back fan cage
3. Fan bottom knob
4. Fan blade
5. Fan top knob
6. Fan cage ring guard
7. Front fan cage
8. Protecting cover
9. Battery
10. Battery cover

ASSEMBLY INSTRUCTIONS

1. Place the base cover over the bottom weighted base plate, ensuring that the screw holes are aligned.
2. Insert the upright pole into the designated slot in the middle of the assembled base.
3. Secure the pole into the base by first placing the washer and then tightening the screw to secure the baseplate to the upright pole. Use a screwdriver to tighten the screw, ensuring the pole is firmly attached to the base.
4. Secure the control unit (1) onto the pole stand by tightening the screw behind it and securing it into place.
5. Secure the bottom fan cage (2) in place by tightening the bottom fan cage knob (3) clockwise.
6. Attach the fan blade (4) to the fan motor shaft, ensuring it is aligned properly and secure the fan blade by tightening the (5) top fan knob counter clockwise or towards the left. Ensure it is firmly tightened to the motor shaft.
7. Position the fan cage guard (6) over the top fan cage. Place the top fan cage (7) over the fan blade and align it with the bottom fan cage.
8. Tighten the lock on the fan cage guard to secure both the top fan cage and guard in place.
9. Double-check all connections and attachments to ensure they are securely fastened.
10. Verify that the fan blade spins freely and does not touch any surrounding parts.
11. Adjust the height of the fan to your preference by using the adjustable lock on the pole stand. Turn the lock left to loosen and adjust the height, then turn it right to tighten and secure the unit at the desired height.
12. Test the fan to ensure it operates smoothly and efficiently.

FUNCTION

1. Power: Turn on or turn off the fan
2. + Increase fan speed
3. - Decrease fan speed
4. Hours timer
5. LED light on/off switch
6. Turn: Oscillation control lock

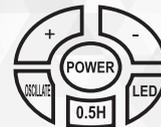

PRODUCT INSTRUCTIONS

1. Plug in the cord into the AC socket and connect the power supply to the fan.
2. The red indicator light will appear when the device is charging.
3. It is normal for the fan to feel slightly warm while charging.
4. Once the indicator light turns green, the fan is ready to be used.

CAUTION

1. Do not discard this product with regular household waste. The battery must be recycled after disposal due to its environmental impact.
2. If the power cord of the device is damaged, it must be replaced exclusively by the manufacturer, their authorized service agent, or a qualified professional to prevent potential hazards.
3. This appliance is not intended for use by individuals, including children, who have physical, sensory, or mental limitations or lack experience and knowledge in its operation, unless they are under the supervision or instruction of a responsible person regarding its safe use.
4. Children should be supervised to ensure that they do not play with the appliance.



Struggling with your device? We can help.
 Contact our support team:

support@apexint.co.za
 support: 086 100 2236

DISTRIBUTED EXCLUSIVELY BY
 APEX INTERACTIVE